

MSD IGNITION™ INSTALLATION INSTRUCTIONS

FORD TFI COIL HARNESS PN 8874

IMPORTANT: Review the Ignition Control Instructions before attempting the installation.

The MSD to Ford TFI Coil Harness is designed to provide a splice-free and simple installation of an MSD Ignition Control to Ford vehicles equipped with a TFI Coil (Figure 1).

MSD 6 and 7 Series Ignitions

All of the wires connect to the corresponding colored wires (Figure 2). MSD 7 Series Ignitions share the same color wires.

1. Disconnect the connector from the coil and connect it to the MSD PN 8874 Harness.
2. Connect the other end of the Harness to the Coil.
3. Connect the four wires of the Harness to the MSD Ignition Control.

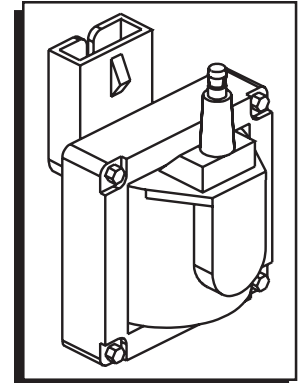


Figure 1 TFI Ford Coil.

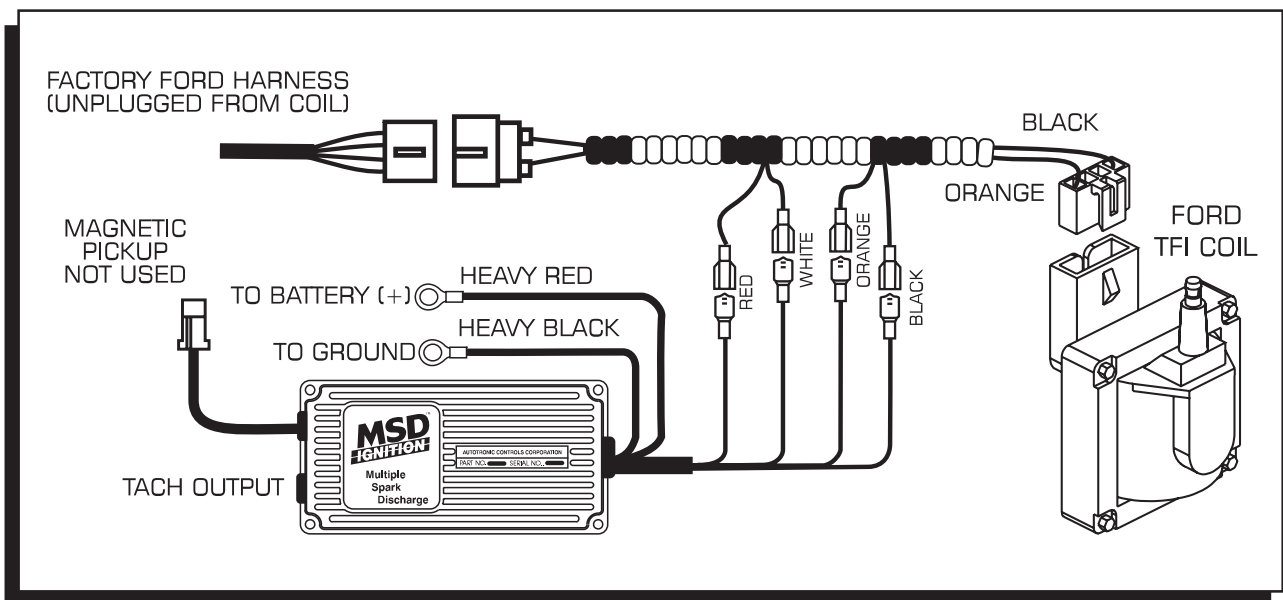


Figure 2 Installation with an MSD 6 or 7 Series Ignition Control.

